
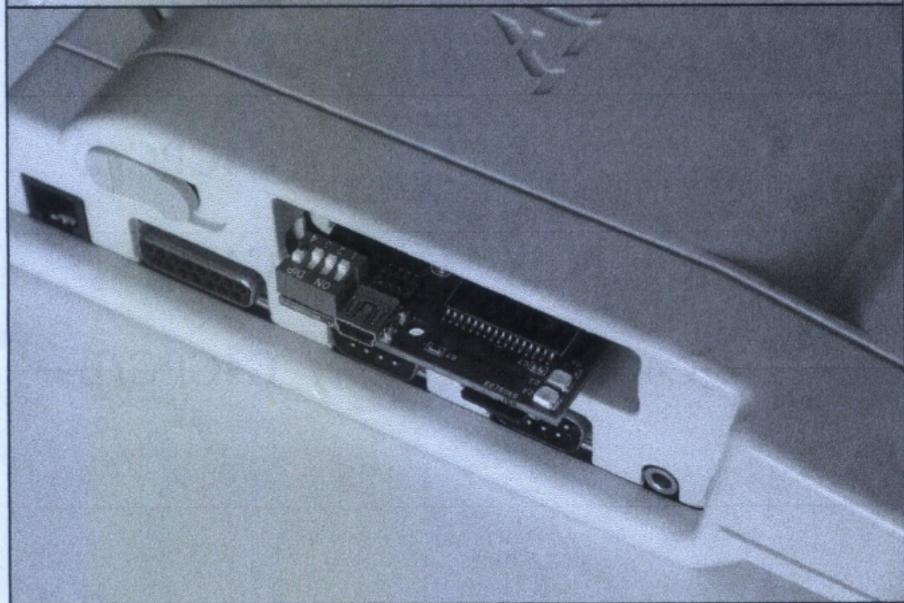


WARNING

Insert the cart in the right way :

On GX400 : the dip swipch face the user. Note on the picture how to insert the cart to allow powering the console.

On 6128/464 the dip swich are up.

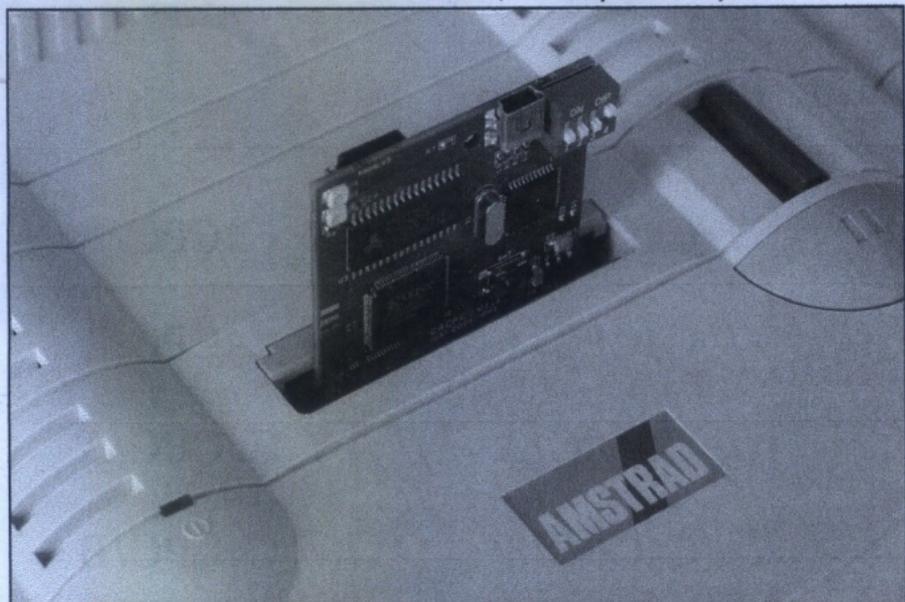



/_C4CPC/0



/_C4CPC/8



/_C4CPC/1



/_C4CPC/9



/_C4CPC/2



/_C4CPC/A



/_C4CPC/3



/_C4CPC/B



/_C4CPC/4



/_C4CPC/C



/_C4CPC/5



/_C4CPC/D



/_C4CPC/6



/_C4CPC/E



/_C4CPC/7



/_C4CPC/F